


C3030-14

Datumovka - Prázdná

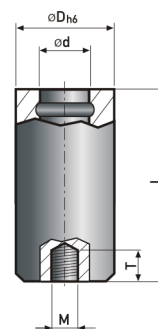

* Parametr "a" udává hloubku šipky ve vložce datumovky.



| kód | D | L | d | a* | M | T |
|-------------|----|----|---|-----|----|---|
| C3030-14/5 | 5 | 17 | 3 | 0,4 | M3 | 3 |
| C3030-14/6 | 6 | 17 | 3 | 0,4 | M3 | 3 |
| C3030-14/8 | 8 | 20 | 4 | 0,4 | M4 | 5 |
| C3030-14/10 | 10 | 20 | 5 | 0,4 | M5 | 5 |
| C3030-14/12 | 12 | 25 | 6 | 0,6 | M6 | 6 |